


NB-3010-U

Windows 10 installation guide




Device installation

Plug the NB-3010-U Oyster reader to a USB port and let the system install the latest Windows driver automatically from Windows Update (WU) Service.

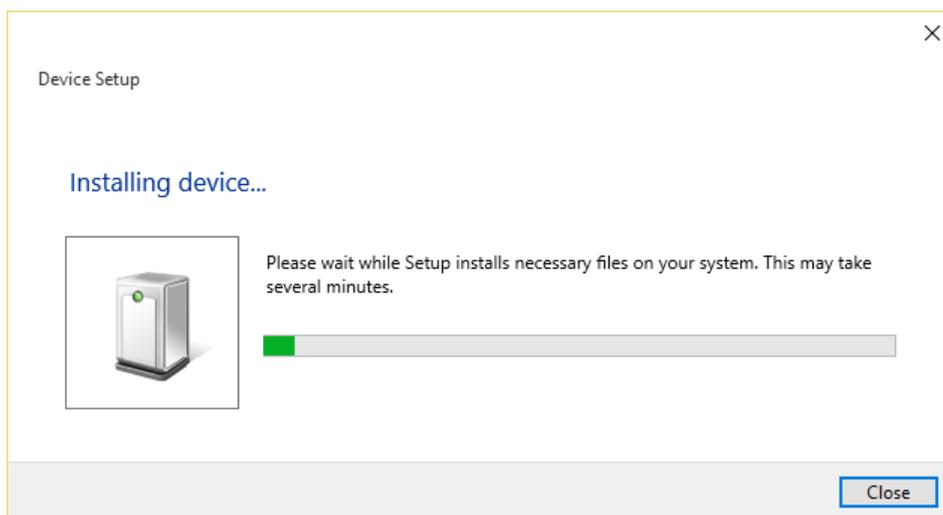


The Oyster is identified as NB-1010-U device.

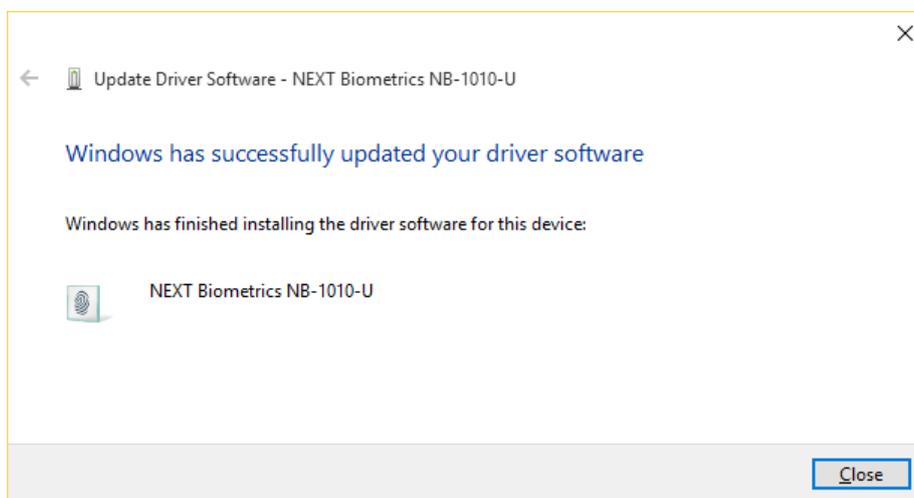

Adding Fingerprint to Your Windows Account


- 1) Select the Start  button and then select **Settings**

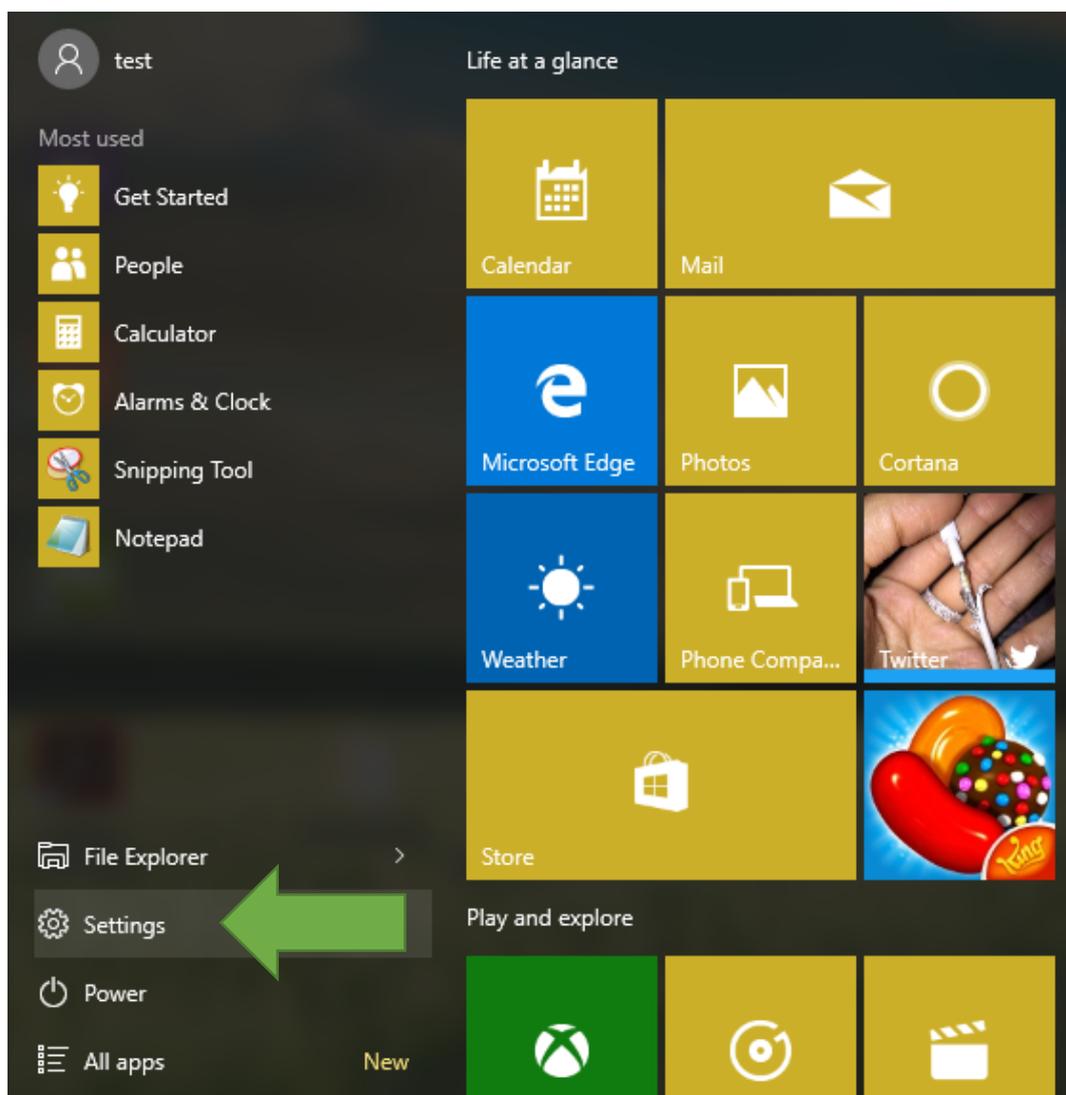

2) On the Settings window, click/tap on **Accounts**




3) On the left side of the Accounts window, click/tap on **Sign-in options**

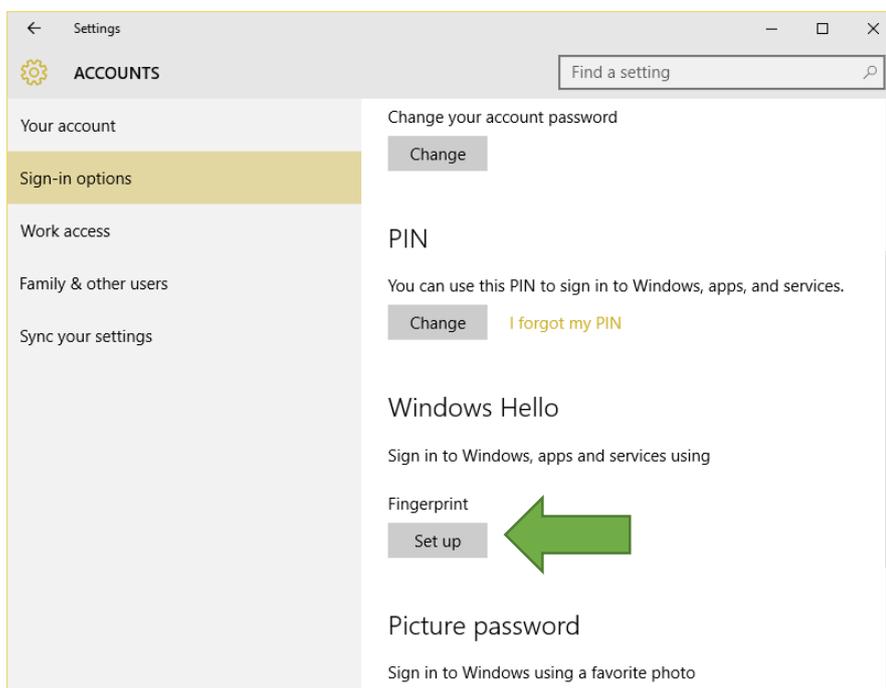


On the right side under **Windows Hello**, click/tap on **Setup** (first finger). Once you've setup the first finger, this option changes to **Add another** (after first time). Click on this new option to add a new finger

- 4) Enter your PIN to verify, and click/tap on **OK**.

Note : if you already added a finger, then you could scan the registered finger on the fingerprint reader instead of entering your password.

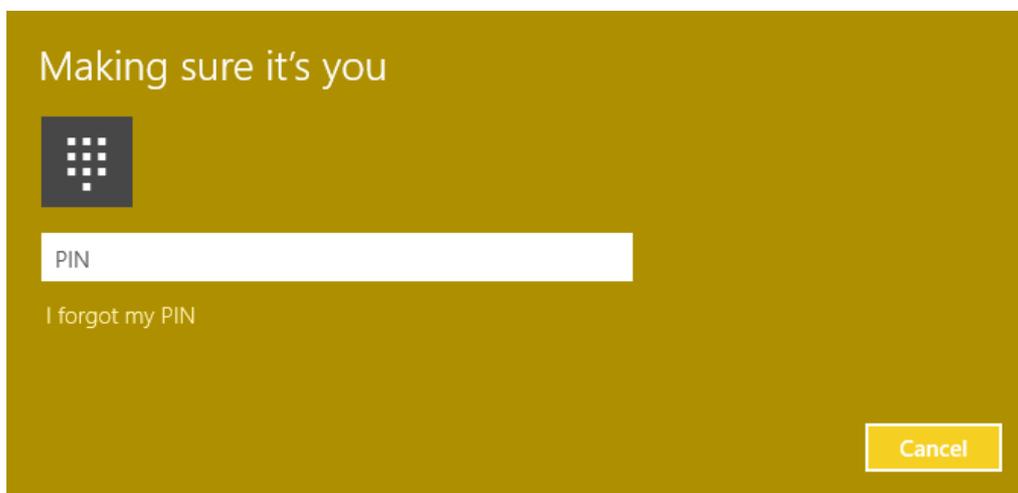

- 5) You will now need to **touch and hold a finger on the fingerprint reader** until the system finish scanning. This way, the system will learn your fingerprint.

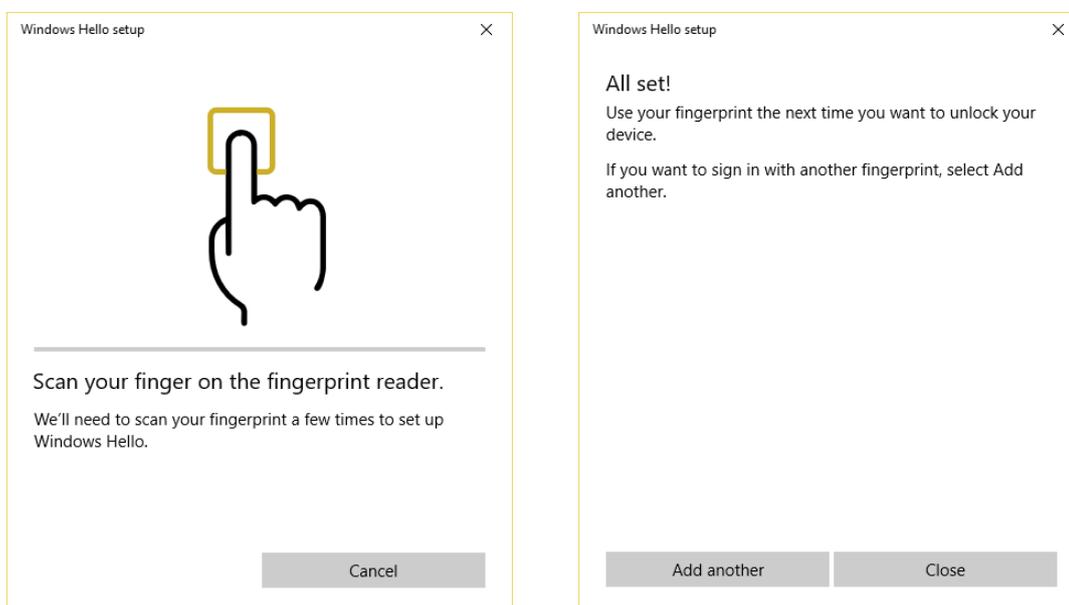

When finished, you can close Windows Hello setup.

You should now be able to log-in to the system with the NB-3010-U fingerprint reader!

Your PC can now be unlocked with a simple touch of an enrolled finger.

Revision history

Date	Revision	Changes
19-Oct 2015	1	Initial release.