


NB-3010-U

Windows 8.1 installation guide




Device installation

Plug the NB-3010-U Oyster reader to a USB port and let the system to install the latest Windows driver automatically from Windows Update Service.

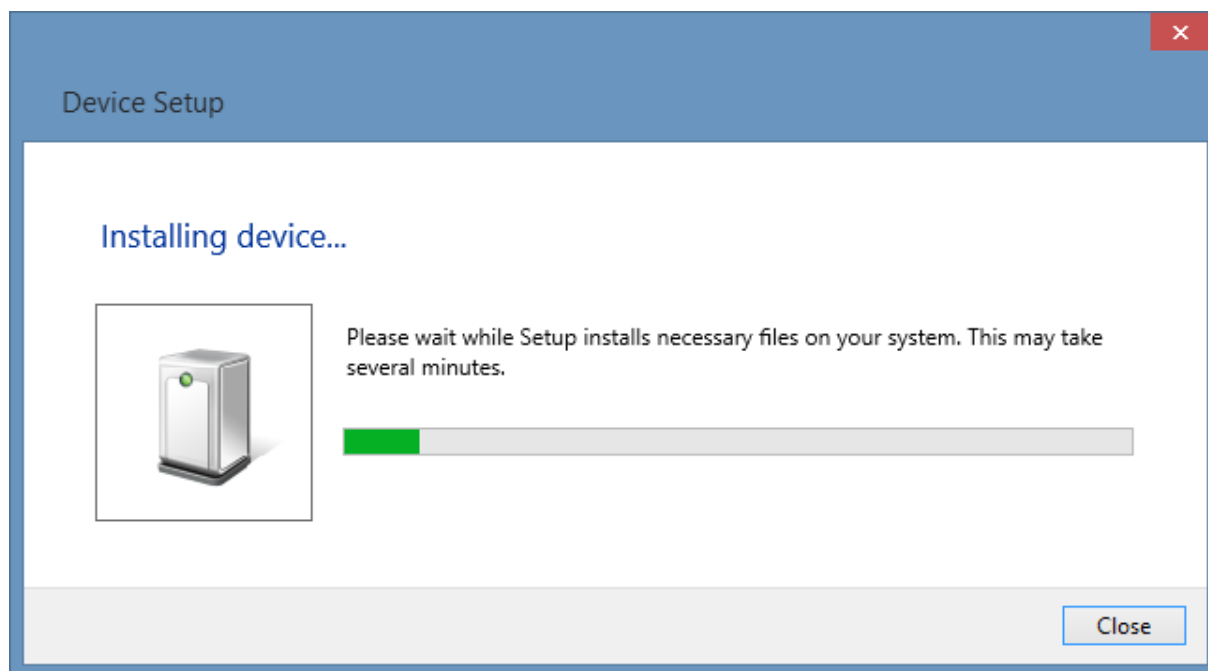


Adding Fingerprint for Your Windows Account

- 1) Open **PC settings**

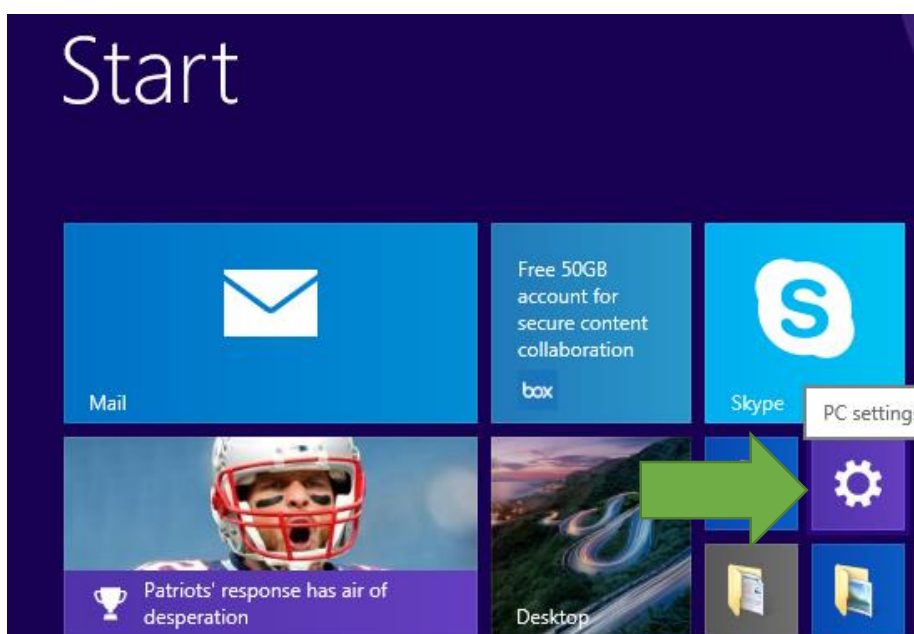

2) Click/tap on **Accounts**

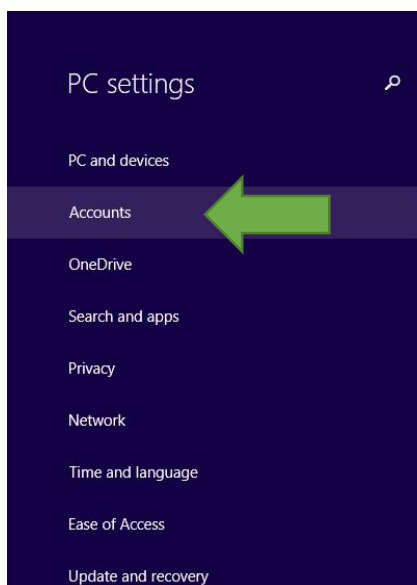


Personalize



3) On the left side, click/tap on **Sign-in options**

On the right side under **Fingerprint**, click/tap on **Add** (first finger) or **Add another** (after first time).

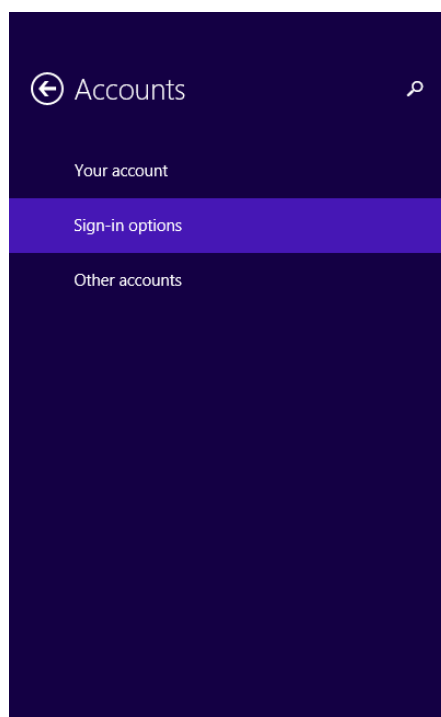

Password

A strong password helps keep your account more secure

Change

Picture password

Sign in to your PC using a favorite photo

Add

Fingerprint

Sign in to your PC by scanning your finger

Add


PIN

Sign in quickly with a four-digit number


Add

- 4) Enter your user account password to verify, and click/tap on **OK**.


Note : if you already added a finger, then you could scan the registered finger on the fingerprint reader instead of entering your password.

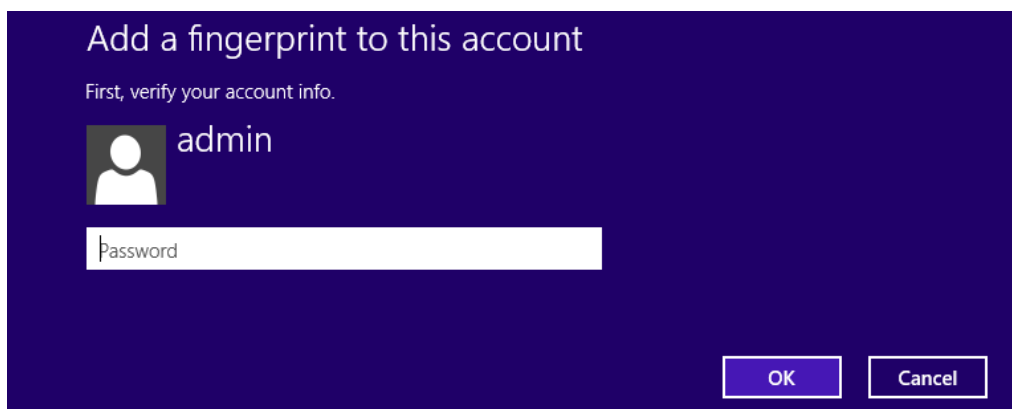

- 5) You will now need to **touch the fingerprint reader** several times as instructed. This way, the system will learn your fingerprint.

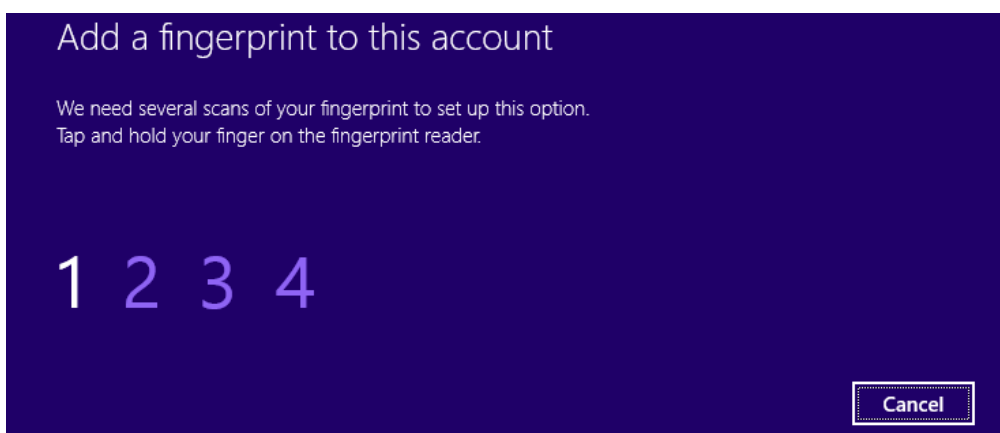

When done, click/tap on **Finish** to save the fingerprint.

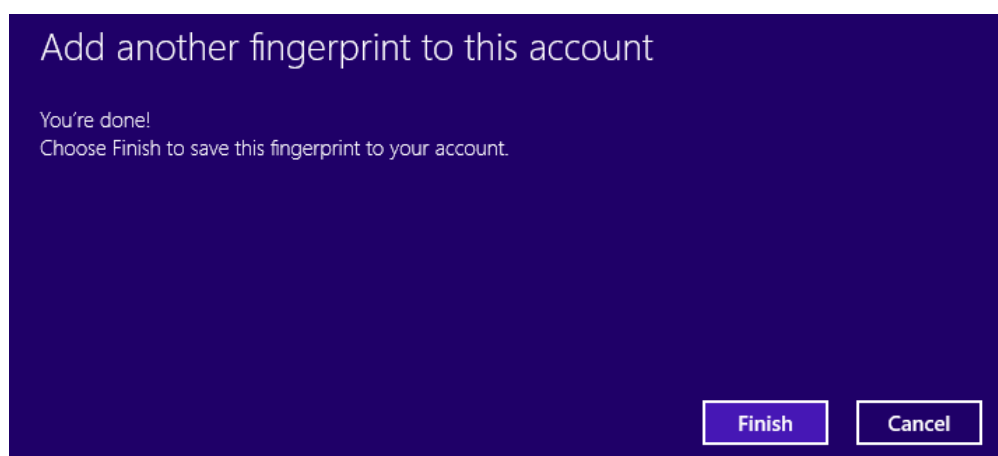

When finished, you can close PC settings.

You should be able to log-in to the system with the NB-3010-U fingerprint reader now.

Also, when you lock your PC in the future, you can unlock it with simple touch of your finger.

Revision history

Date	Revision	Changes
15-May 2015	1	Initial release.